Thin-Twin (Washer/Dryer)

MODELS:

LTE5243DQB (White)

© 2013 Whirlpool Corporation
Part No. W10589560 Rev. A

WASHER/DRYER CONTROL PANEL PARTS

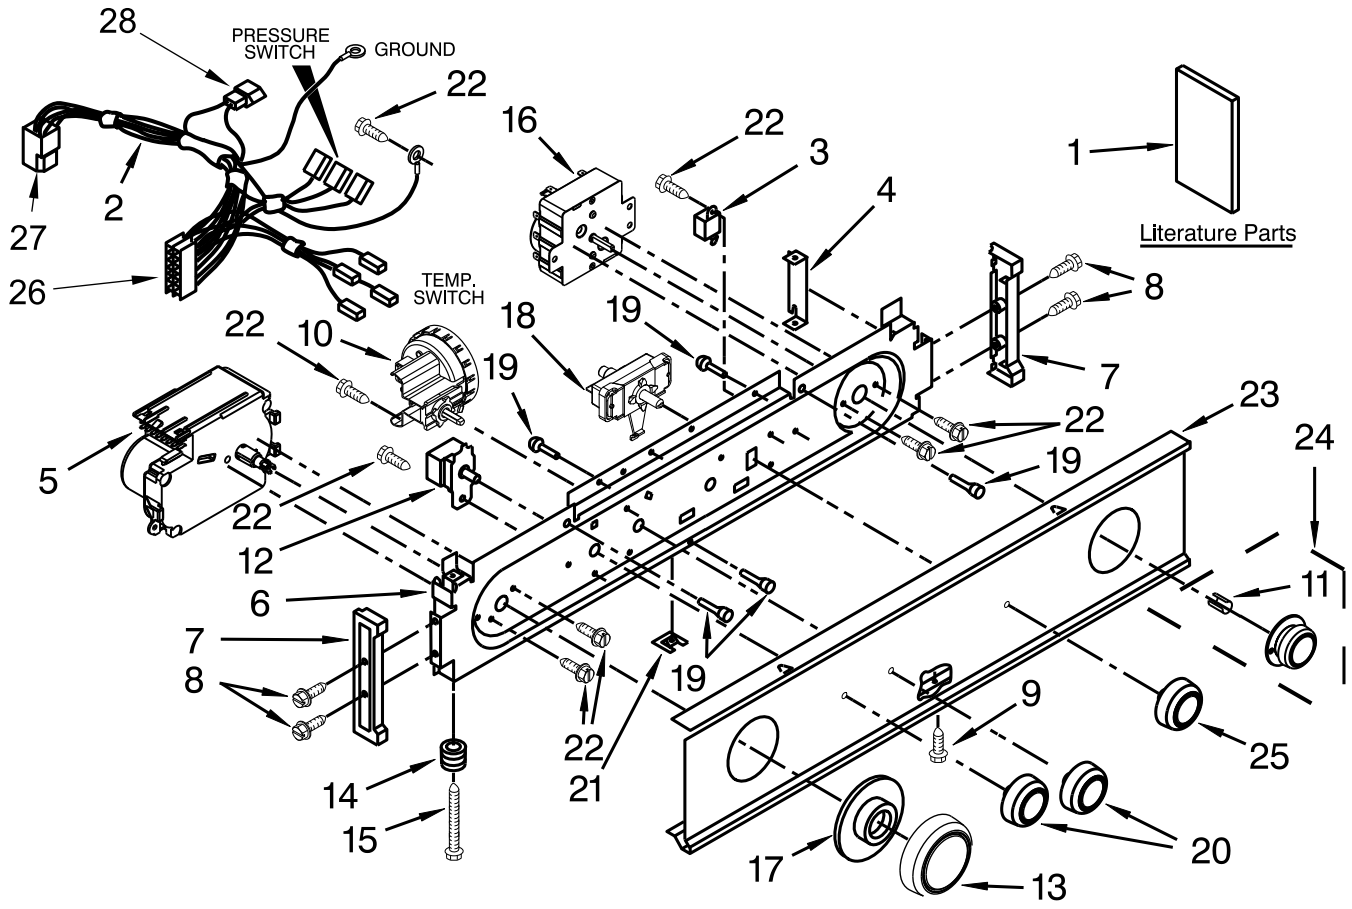

WASHER/DRYER CONTROL PANEL PARTS

Illus. No.	Part No.	Description
1		Literature Parts
	W10558490	Installation Instructions
	W10196553	Use & Care Guide
	W10404614	Energy Guide
	8542754	Sheet, Cycle Feature
	W10488817	Wiring Diagram
2	W10278751	Harness, Console Wiring (Automatic)
3	W10503559	Buzzer, Mini
4	692983	Lock, Console
5	3952499	Timer, Control (60 Hz.) (Automatic Washer)
6	8528154	Bracket, Control
7	692993	End Cap, Console (L.H. & R.H.)
8	348689	Screw
9	694091	Screw
10	W10231404	Switch, Water Level
11	688805	Clip, Spring
12	8054142	Switch, Water Temperature
13	3957821	Knob, Timer (Washer)
14	693151	Spring, Console Lock
15	3400860	Screw, Console Lock
16	3406720	Timer, Control (60 Hz.) (Dryer) (Timer Motor Not Serviceable)
17	3957841	Dial, Timer (Washer)
18	W10503561	Switch, Push-To-Start
19	90767	Screw
20	3957796	Knob, Control
21	694037	Clip, Console
22	8533971	Screw
23	3977194	Panel, Control
24	3957752	Knob, Timer (Dryer)
25	3957800	Knob, Push-To-Start
26	696073	Receptacle, Connector (Connects With Lower Automatic Harness)
27	3948614	Block, Timer Disconnect
28	3350130	Plug, 3 Way

DRYER FRONT PANEL AND DOOR PARTS

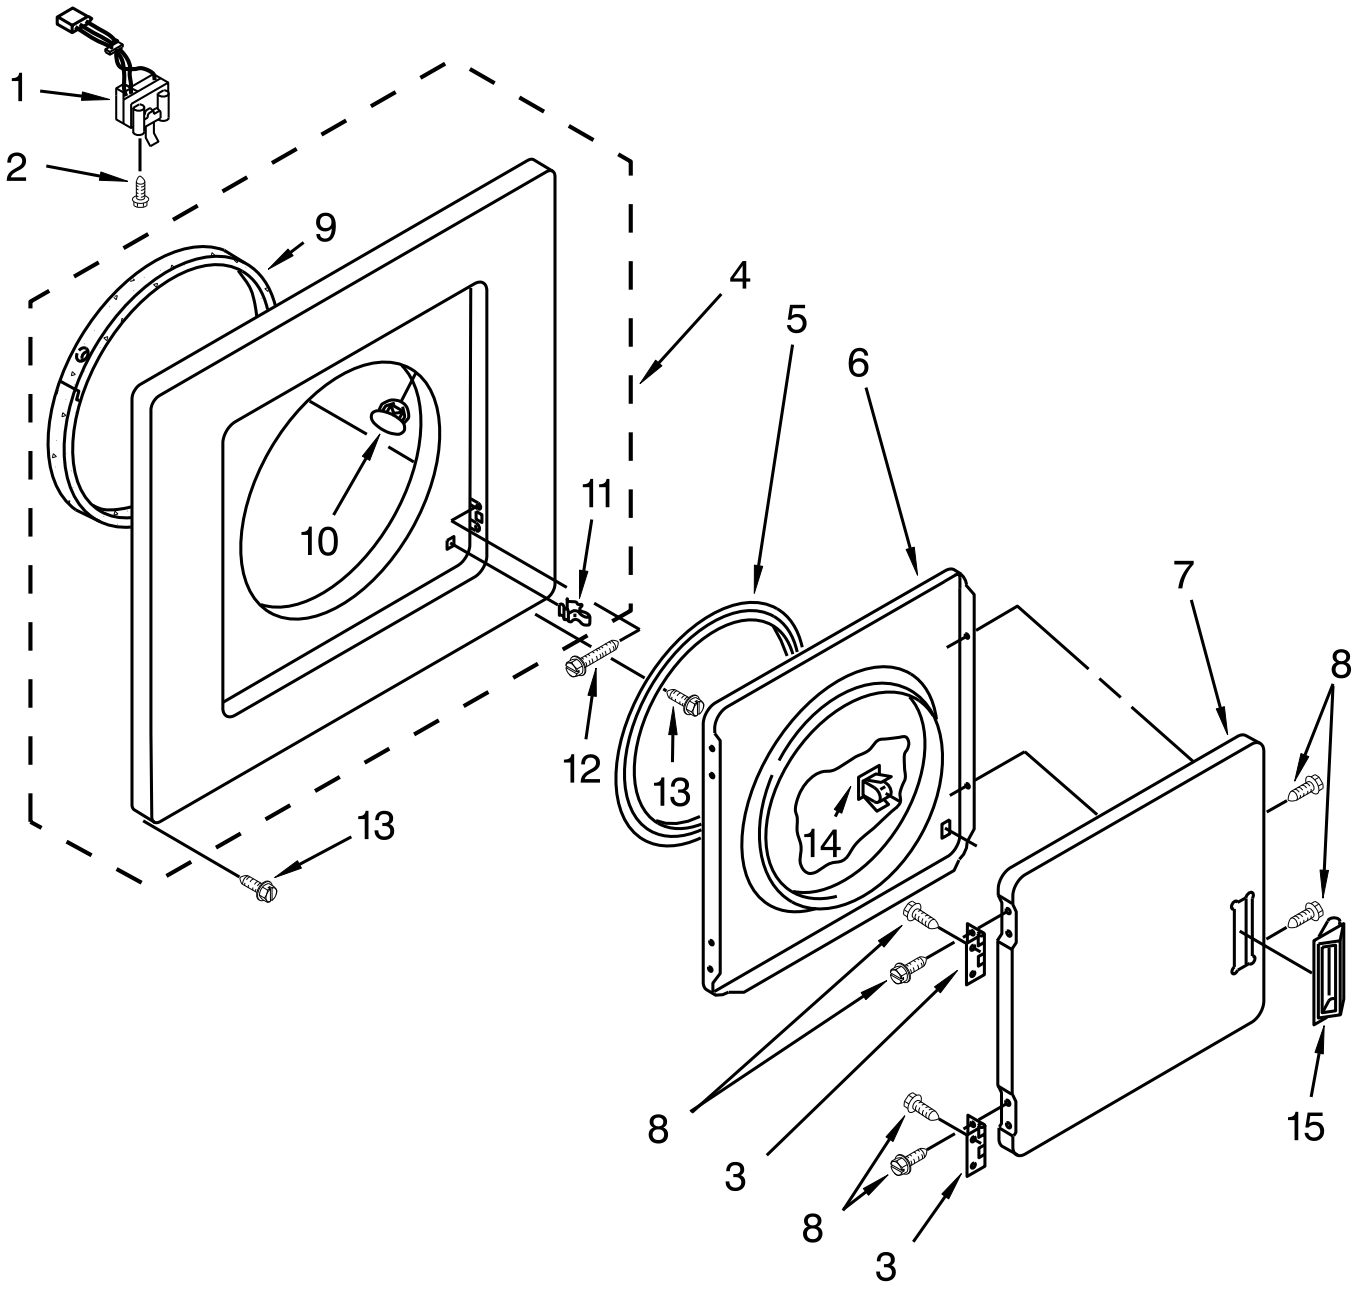

DRYER FRONT PANEL AND DOOR PARTS

Illus. No.	Part No.	Description
1	3406108	Switch, Door
2	697773	Screw
3	348023	Hinge & Pin Assembly
4	692619	Panel, Front
5	W10465697	Seal, Door
6	695656	Door, Rear
7		Panel, Front
	348205	White
8	694091	Screw
9	8066123	Seal & Bearing Assembly
10	685203	Clip, Felt Pad
11	696144	Strike, Door
12	3390663	Screw
13	343641	Screw
14	3389441	Door Catch Assembly
15	686711	Handle, Door

DRYER CABINET AND MOTOR PARTS

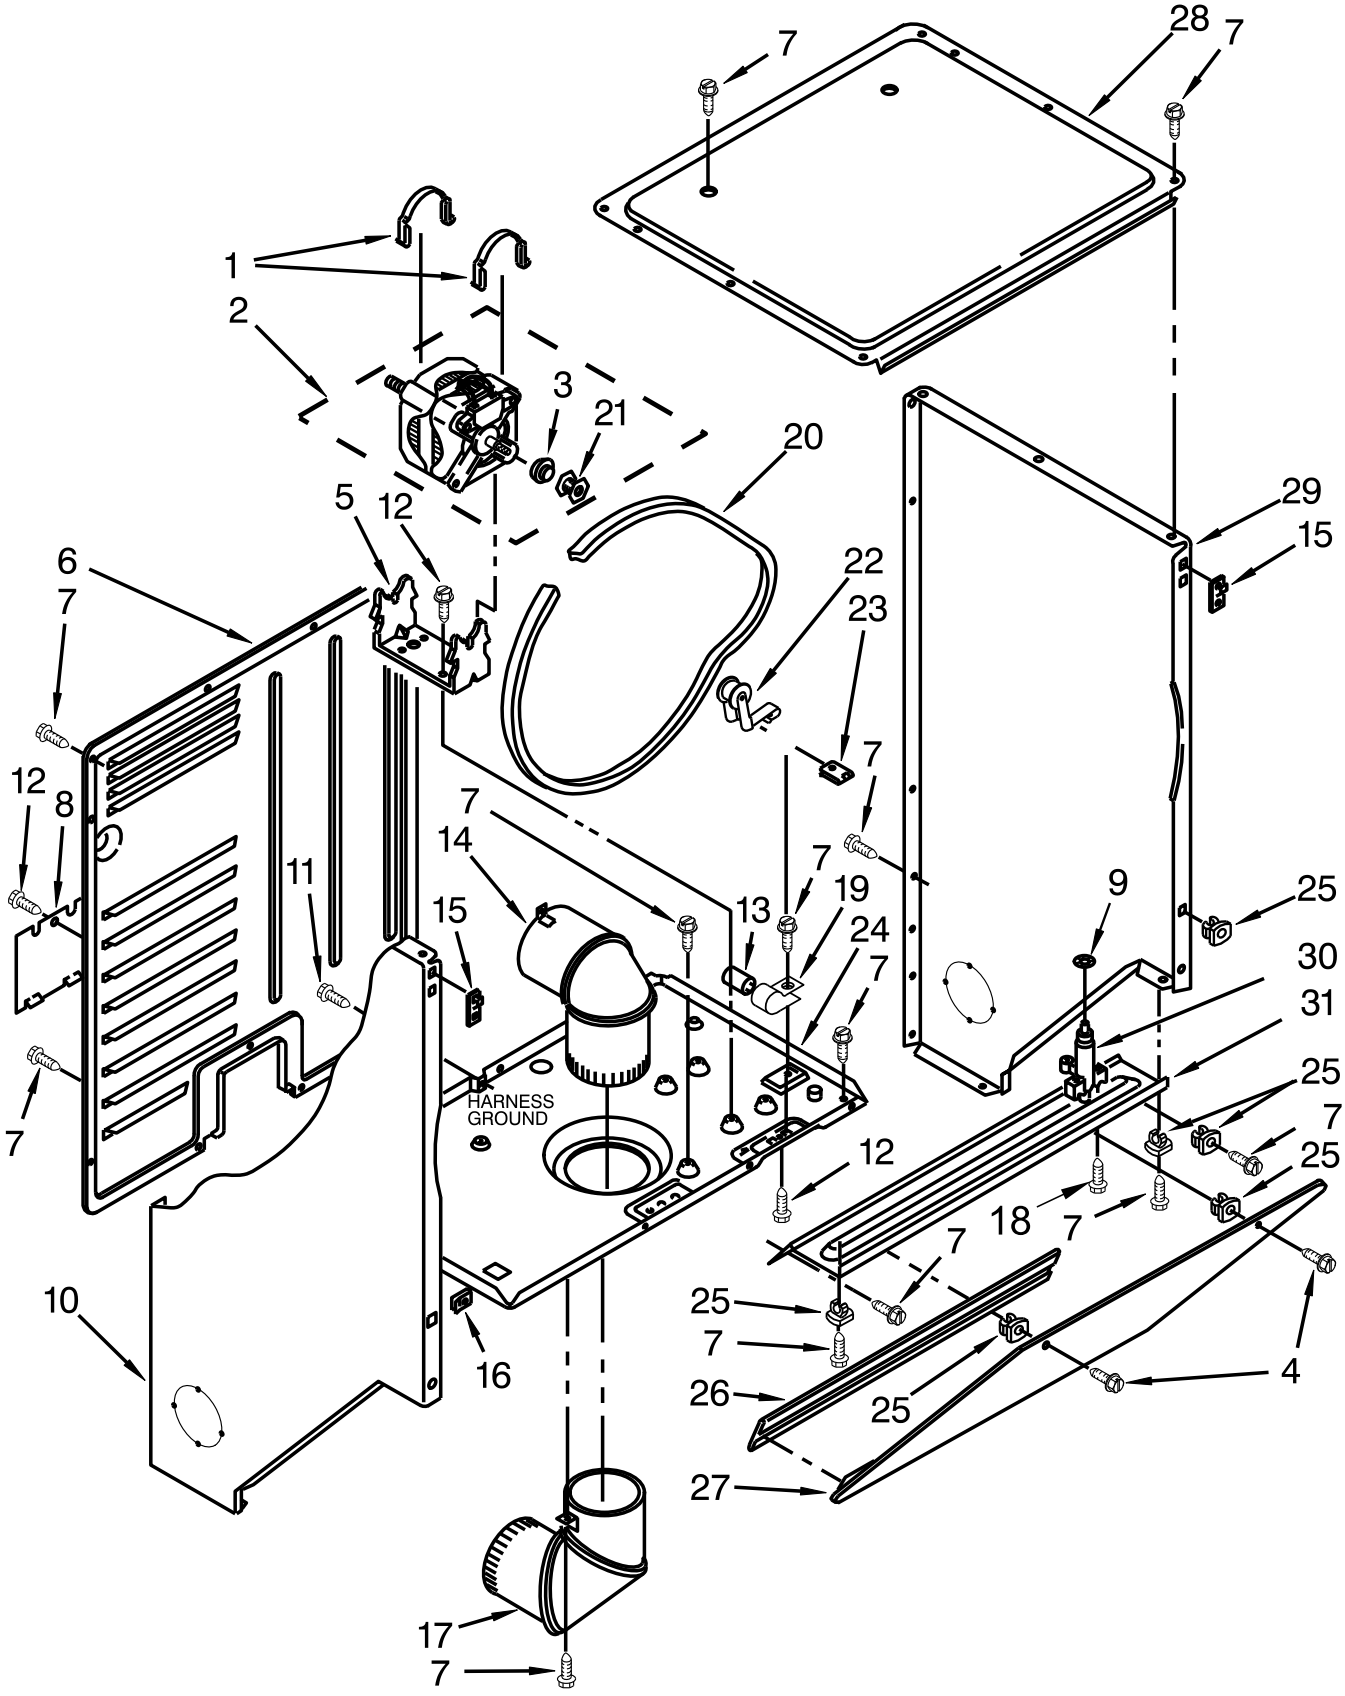

DRYER CABINET AND MOTOR PARTS

Illus. No.	Part No.	Description
1	660658	Clamp, Motor
2	W10396037	Motor, Main Drive (60 HZ)
3	3393657	Restrainer, Belt
4	693304	Screw
5	696541	Base, Motor
6	3390405	Panel, Rear
7	343641	Screw
8	3394228	Cover, Terminal Block
9	90296	Nut, Push On
10	3402293	Panel, Side (L.H.)
11	8533974	Screw
12	3390631	Screw
13	8572717	Capacitor, Motor Start
14	3399602	Elbow, Upper
15	3394083	Clip, Front Panel
16	98234	Clip, Ground
17	3399603	Elbow, Lower
18	354975	Screw & Washer (Lid Latch Mounting)
19	357030	Clamp, Capacitor
20	8066064	Belt, Drive
21	8066051	Pulley, Motor
22	691366	Assembly, Idler
23	692771	Nut, Idler Bracket To Base
24	3399632	Base, Dryer
25	692400	Screw Grommet
26	692926	Cove, Transition Panel (Black)
27	692933	Panel, Transition
28	692641	Top, Dryer
29	3402287	Panel, Side (R.H.)
30	693145	Latch, Lid
31	692781	Closure, Control Area

DRYER BULKHEAD PARTS

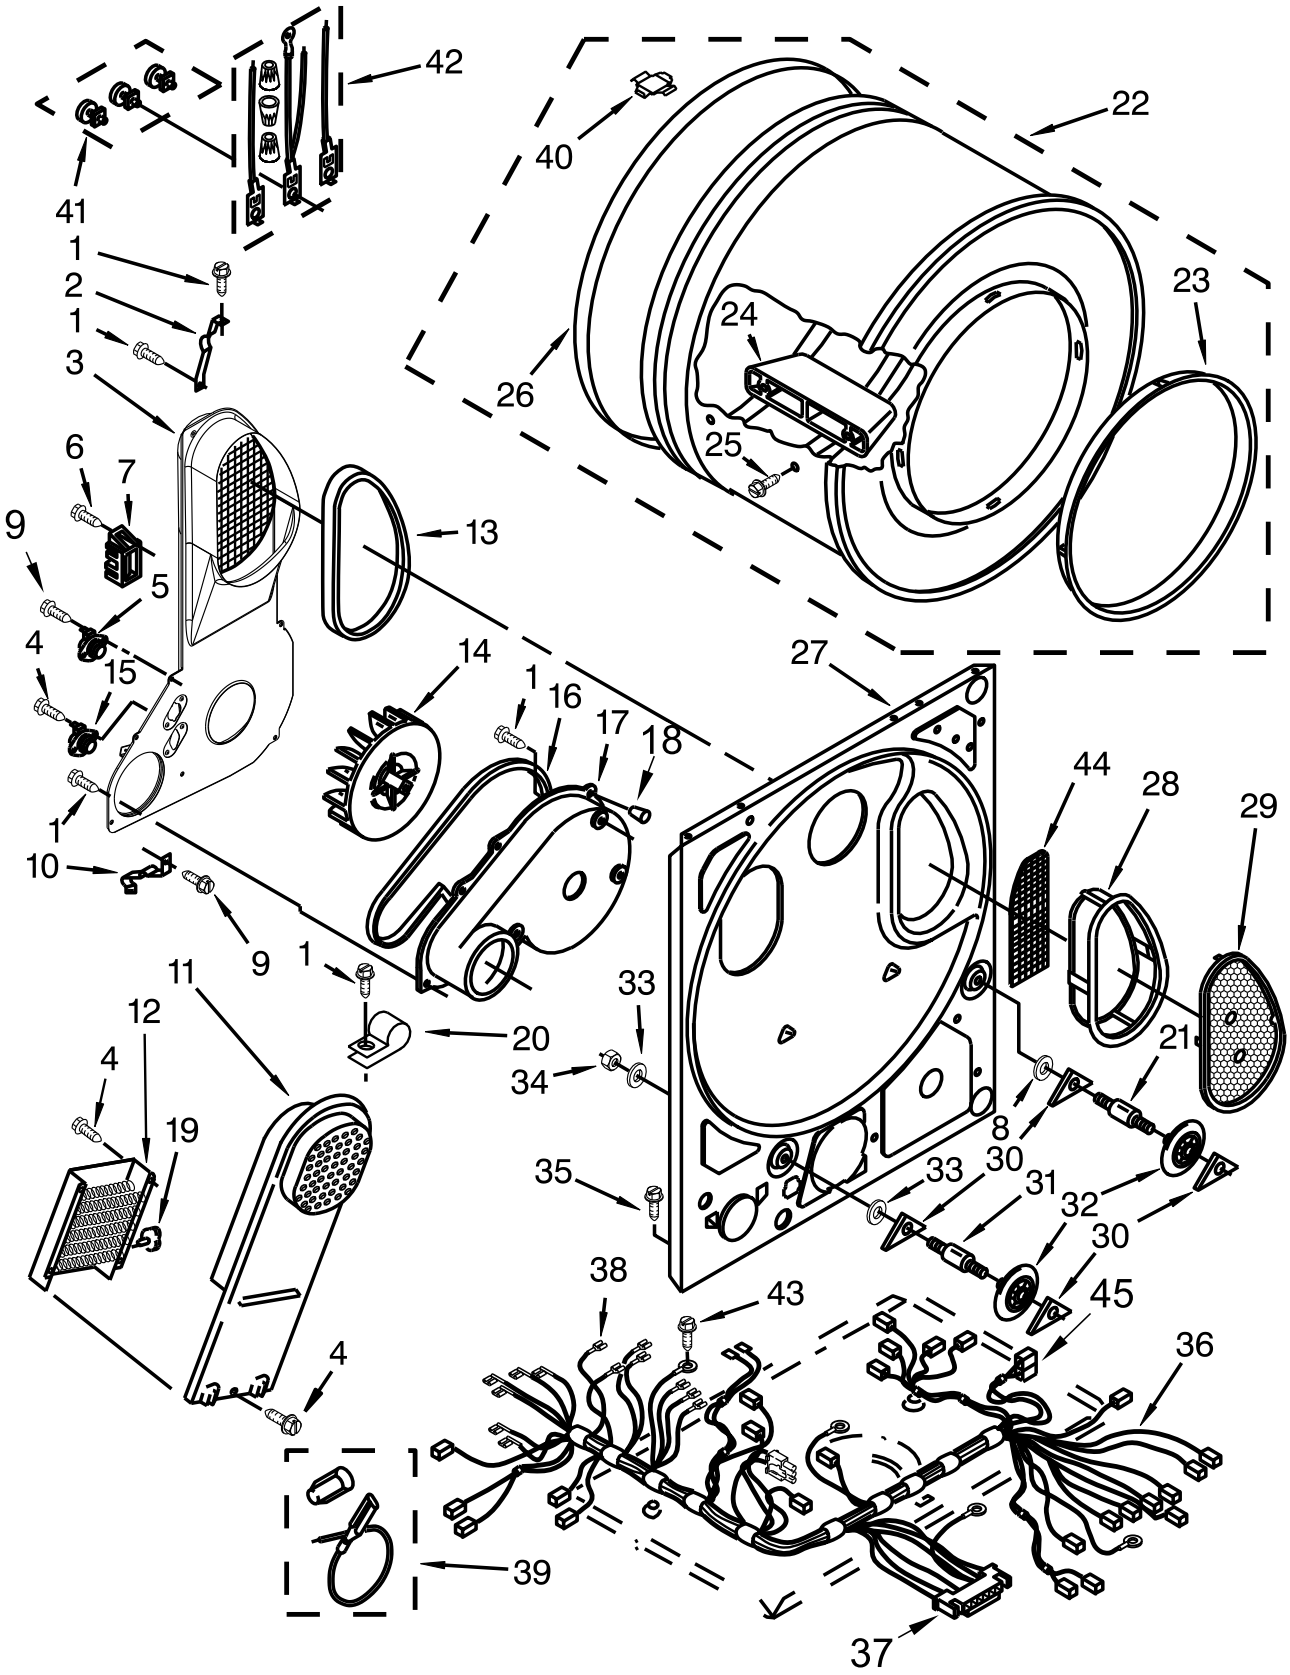

DRYER BULKHEAD PARTS

Illus. No.	Part No.	Description
1	343641	Screw
2	3395396	Clip, Air Duct To Bulkhead
3	696547	Air Duct & Bracket
4	90767	Screw
5	3398128	Thermostat, Internal Bias
6	3393008	Screw
7	3397659	Block, Terminal
8	3388703	Washer
9	489463	Screw
10	3398161	Clip Heater Box
11	3401380	Box, Heater
12	3403586	Element, Heater
13	339956	Seal
14	696426	Wheel, Blower
15	8572767	Thermal Limiter 192~F (89C)
16	8066094	Seal, Fan Scroll
17	696418	Fan Scroll
18	359702	Cap
19	3404154	Thermostat, High Limit (200~/160F)
20	255563	Clip, Strain Relief
21	W10359269	Shaft, Drum Roller - Right Hand Thread
22	695943	Drum Assembly Complete
23	3394508	Ring, Bearing
24	685207	Baffle, Drum
25	W10219342	Screw
26	345648	Seal, Drum Rear
27	695931	Bulkhead
28	8531964	Lint Screen
29	8531967	Cover, Lint Screen Outlet
30	690997	Washer, Tri Ring
31	W10359270	Shaft, Drum Roller - Left Hand Thread
32	3397590	Roller, Support
33	348197	Washer
34	3359452	Nut, Hex
35	3390631	Screw
36	W10493278	Harness, Main Dryer Wiring
37	3395683	Connector, Housing
38	94614	Terminal, Female
39	279457	Terminal Wire Kit (For Heater Element Wiring Harness Repair)
40	8066086	Plug, Drum Hole
41	279393	Screw Kit, Terminal Block
42	279318	Terminal, Brass & Tinned (Includes Terminal Block Screw Kit)
43	8533974	Screw
44	348378	Screen, Back-up
45	717252	Plug, 2 Way

DRYER SUPPORT AND WASHER PARTS

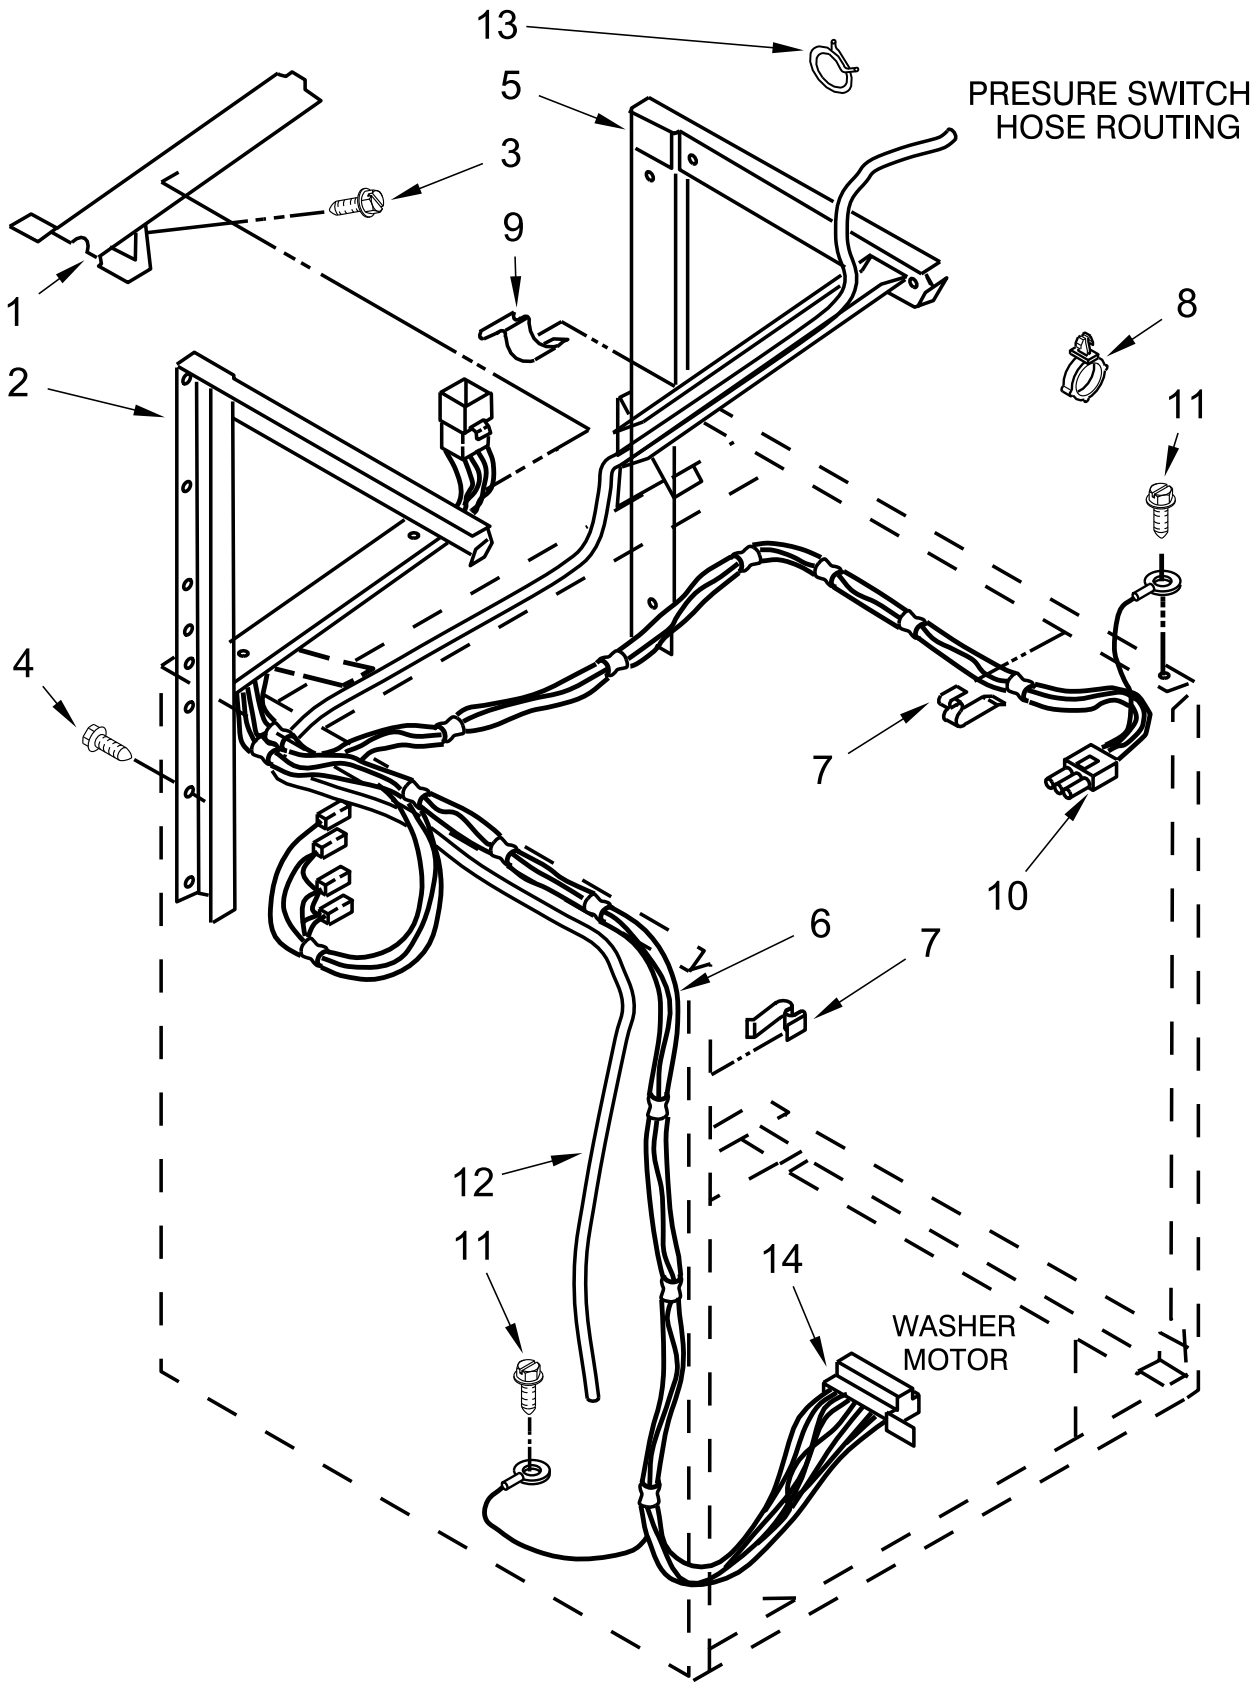

DRYER SUPPORT AND WASHER PARTS

Illus. No.	Part No.	Description
1	694304	Cover, Channel
2	692647	Support, Dryer (L.H.)
3	343641	Screw
4	3400000	Screw
5	692646	Support, Dryer (R.H.)
6	W10303815	Harness, Lower (Automatic)
7	3347812	Clip, Harness Wiring
8	3352501	Clip, Push-In
9	90016	Clip, Harness
10	62889	Plug, Terminal (3-Way) (Connects With Automatic Lid Switch Harness)
11	3351614	Screw
12	W10279264	Hose, Pressure Switch
13	W10251893	Clamp, Hose
14	62505	Block, Disconnect (Motor)

WASHER CABINET PARTS

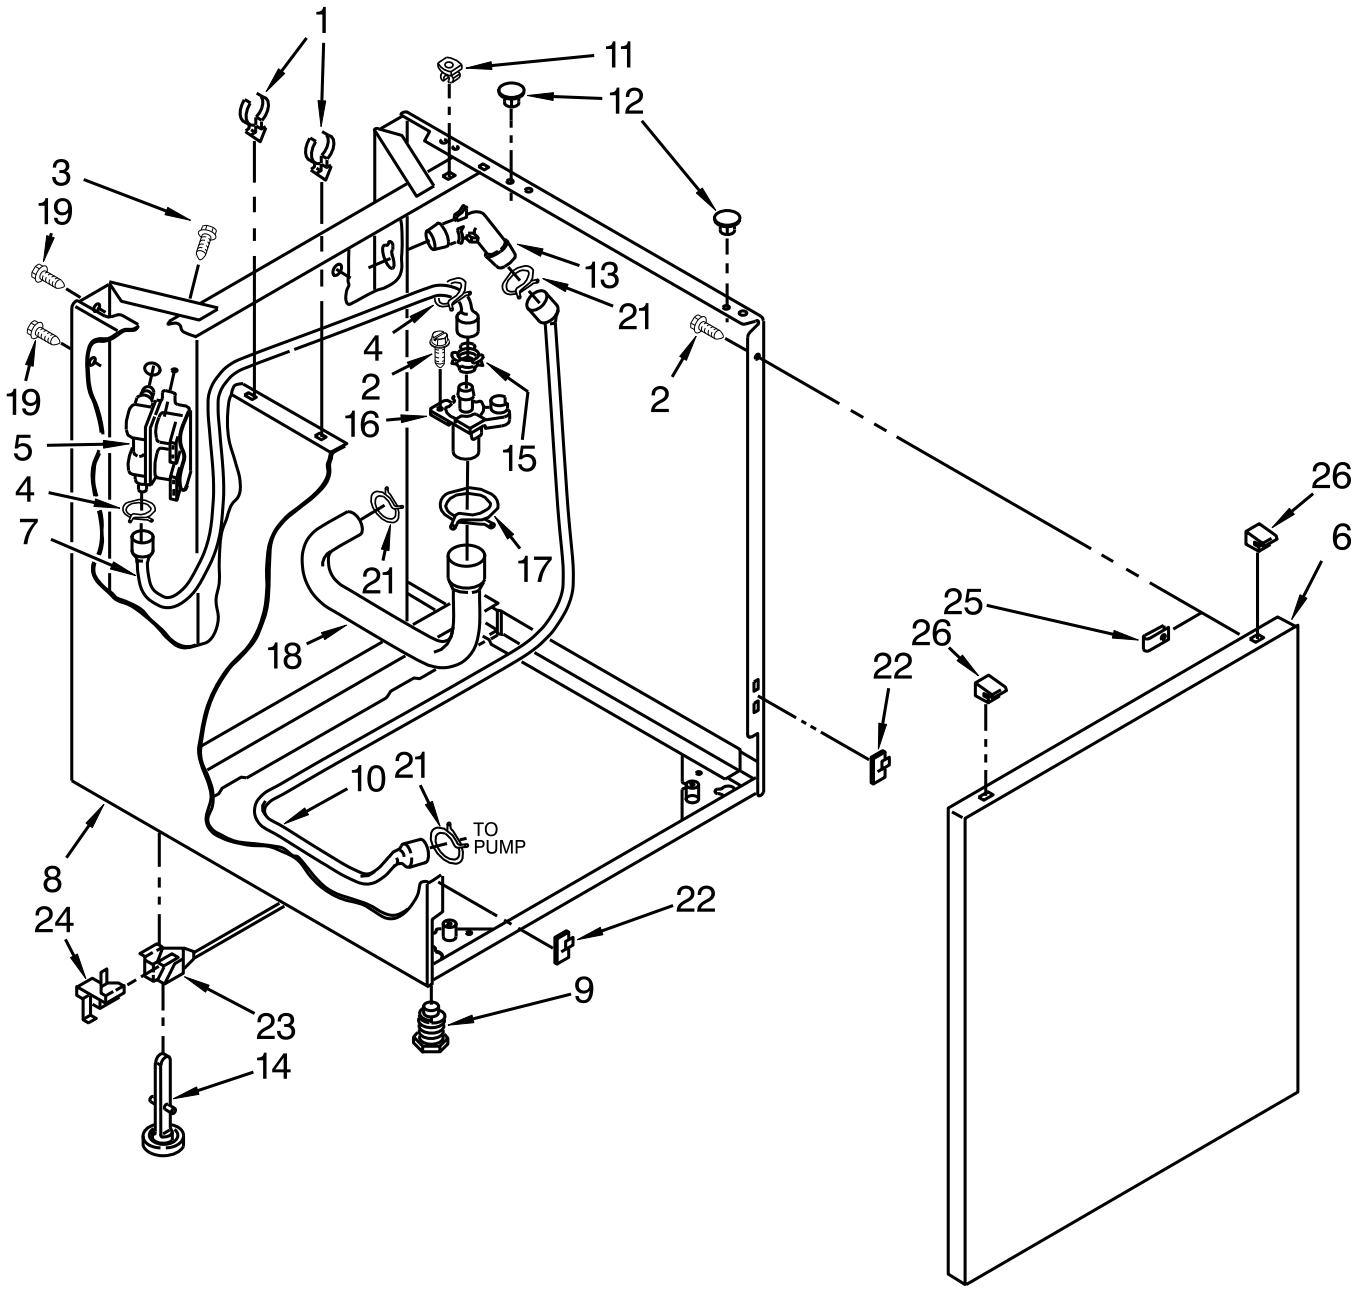

WASHER CABINET PARTS

Illus. No.	Part No.	Description
1	356746	Clip, Condenser
2	343641	Screw
3	9740848	Screw
4	370451	Clamp, Hose
5	3952163	Valve, Water Mixing
6	692628	Panel, Front
7	692699	Hose, Water Inlet (Siphon Break To Mixing Valve)
8	696013	Cabinet
9	367594	Foot, Front
10	696710	Hose, Drain
11	692400	Screw Grommet
12	660975	Plug
13	8557915	Connector, Hose
14	358594	Foot, Rear
15	356471	Cap, Siphon Break
16	356363	Siphon Break
17	272861	Clamp, Hose
18	696394	Hose, Water Inlet (Siphon Break To Tub Ring)
19	3400000	Screw
21	660628	Clamp, Hose
22	3394083	Clip, Front Panel
23	358652	Link, Leveling
24	359364	Clip, Leveling Mechanism
25	98234	Clip, Ground
26	345670	Lock Top

WASHER TOP AND LID PARTS

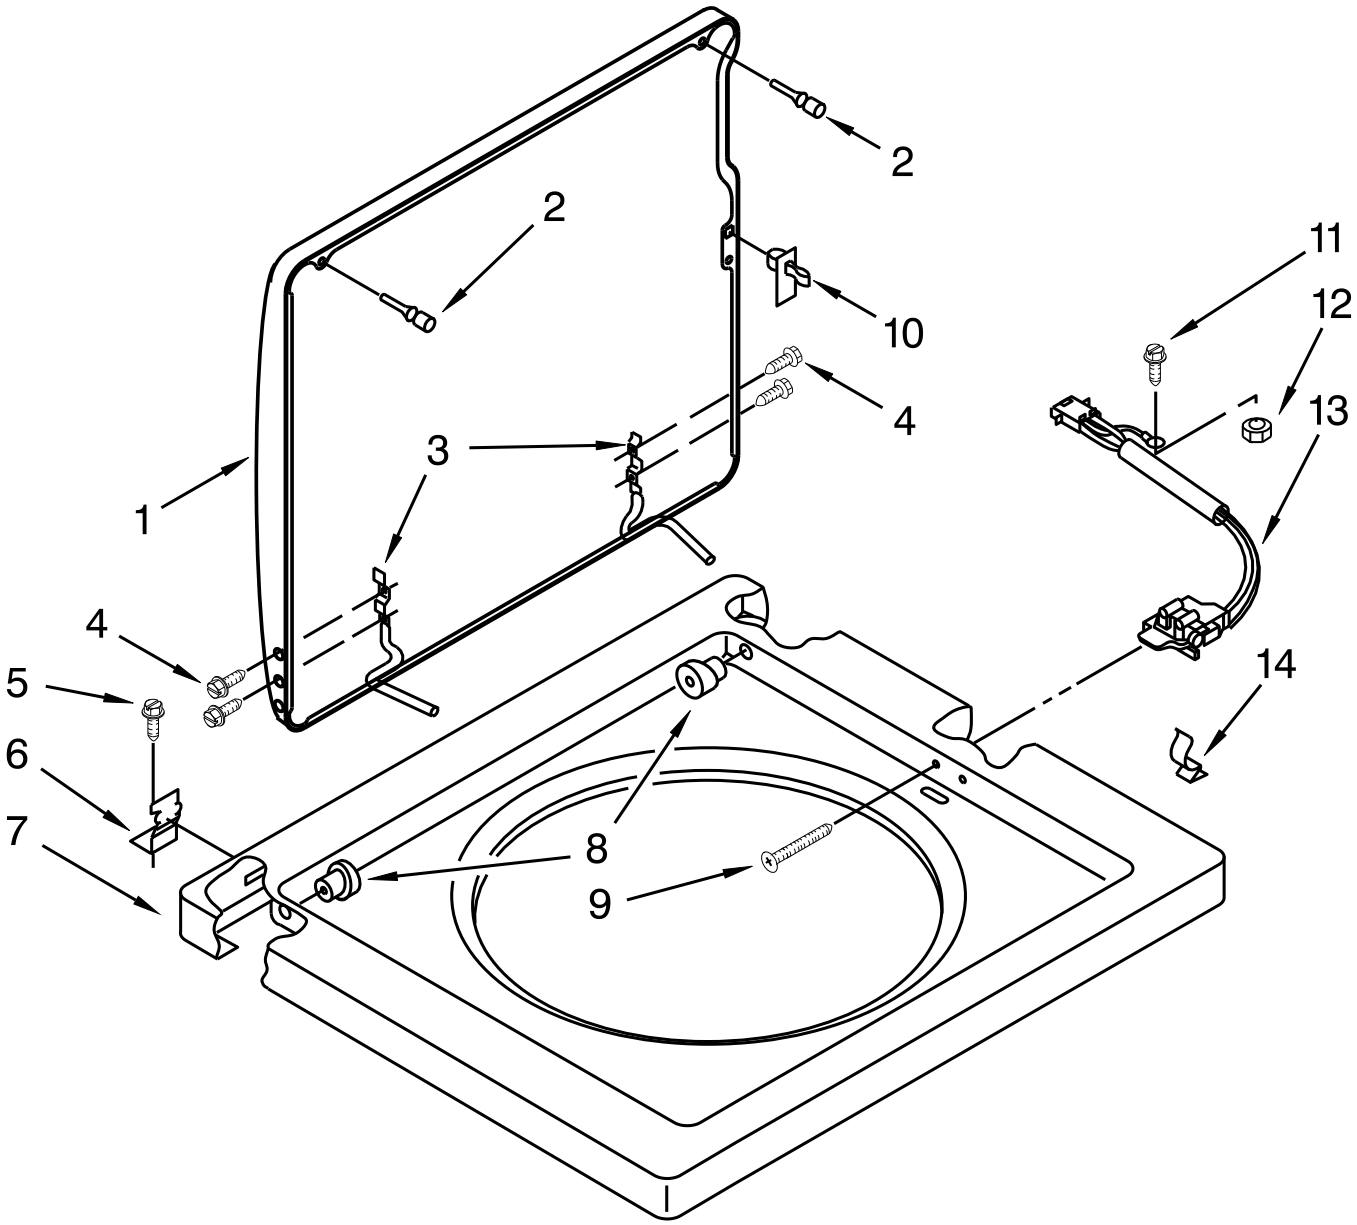

WASHER TOP AND LID PARTS

Illus. No.	Part No.	Description
1	3398848	Lid
2	9724509	Bumper, Lid
3	91770	Hinge, Lid
4	W10119872	Screw
5	343641	Screw
6	692985	Clip, Spring (Top To Cabinet)
7	384693	Top
8	21258	Bearing, Lid Hinge
9	3356311	Screw & Washer
10	358684	Strike, Lid Switch
11	3400030	Screw
12	8533959	Nut
13	3355806	Switch, Lid
14	90016	Clip, Harness

TUB AND BASKET PARTS

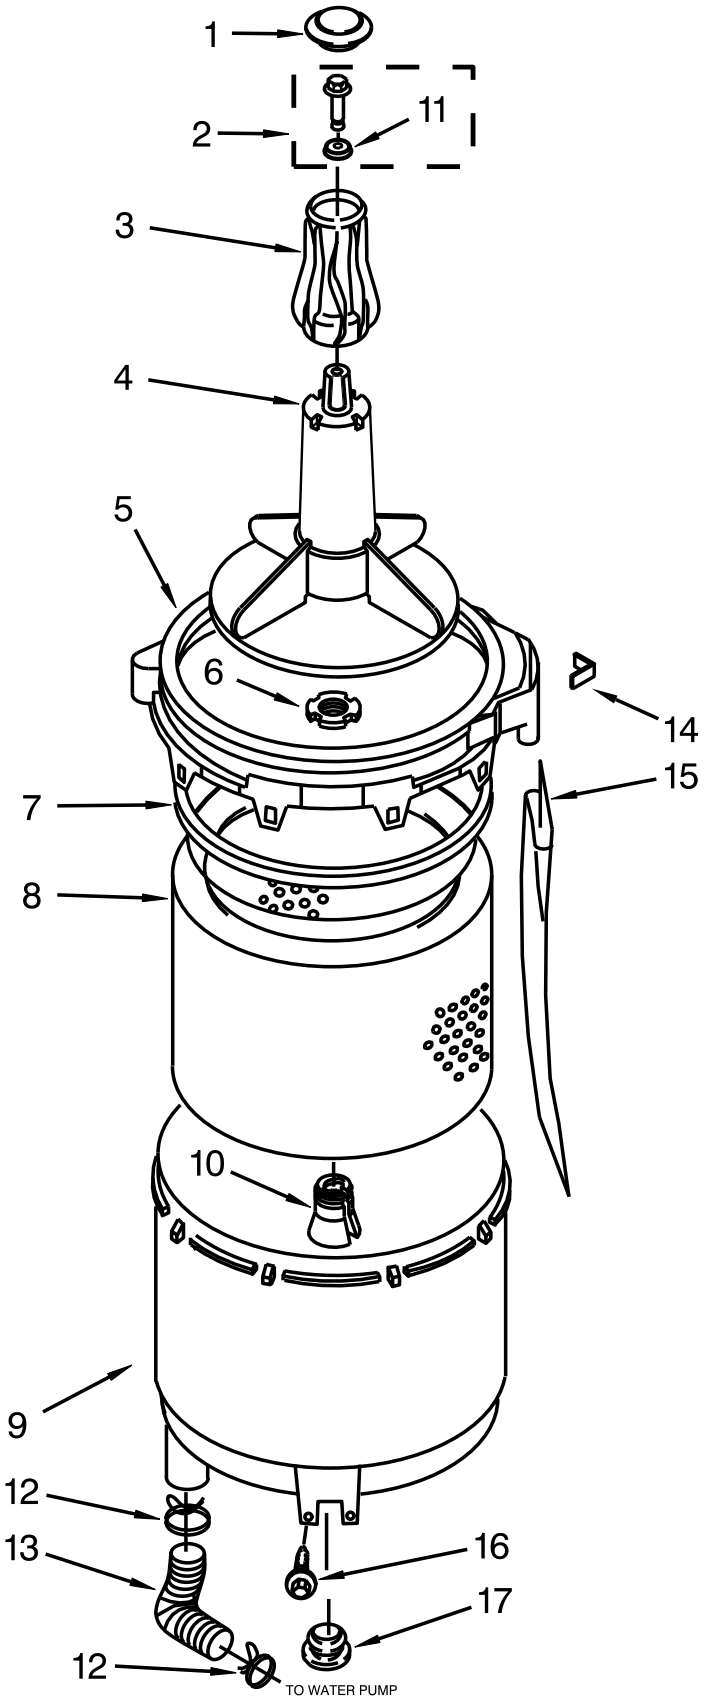

TUB AND BASKET PARTS

Illus. No.	Part No.	Description
1	3355758	Cap, Agitator
2	358237	Screw & Washer
3	63840	Filter, Agitator
4	3349098	Agitator
5	64175	Tub Ring & Gasket
6	21366	Nut, Spanner
7	3359587	Gasket, Tub Ring
8	3351985	Basket
9	8066082	Tub, Assembly
10	389140	Block, Basket Drive
11	3949550	Washer
12	3363366	Clamp, Hose
13	8066201	Hose, Tub To Pump
14	8577411	Foam Strip
15	356398	Tube, Drain Off
16	357640	Screw
17	383727	Gasket, Centerpost

MACHINE BASE PARTS

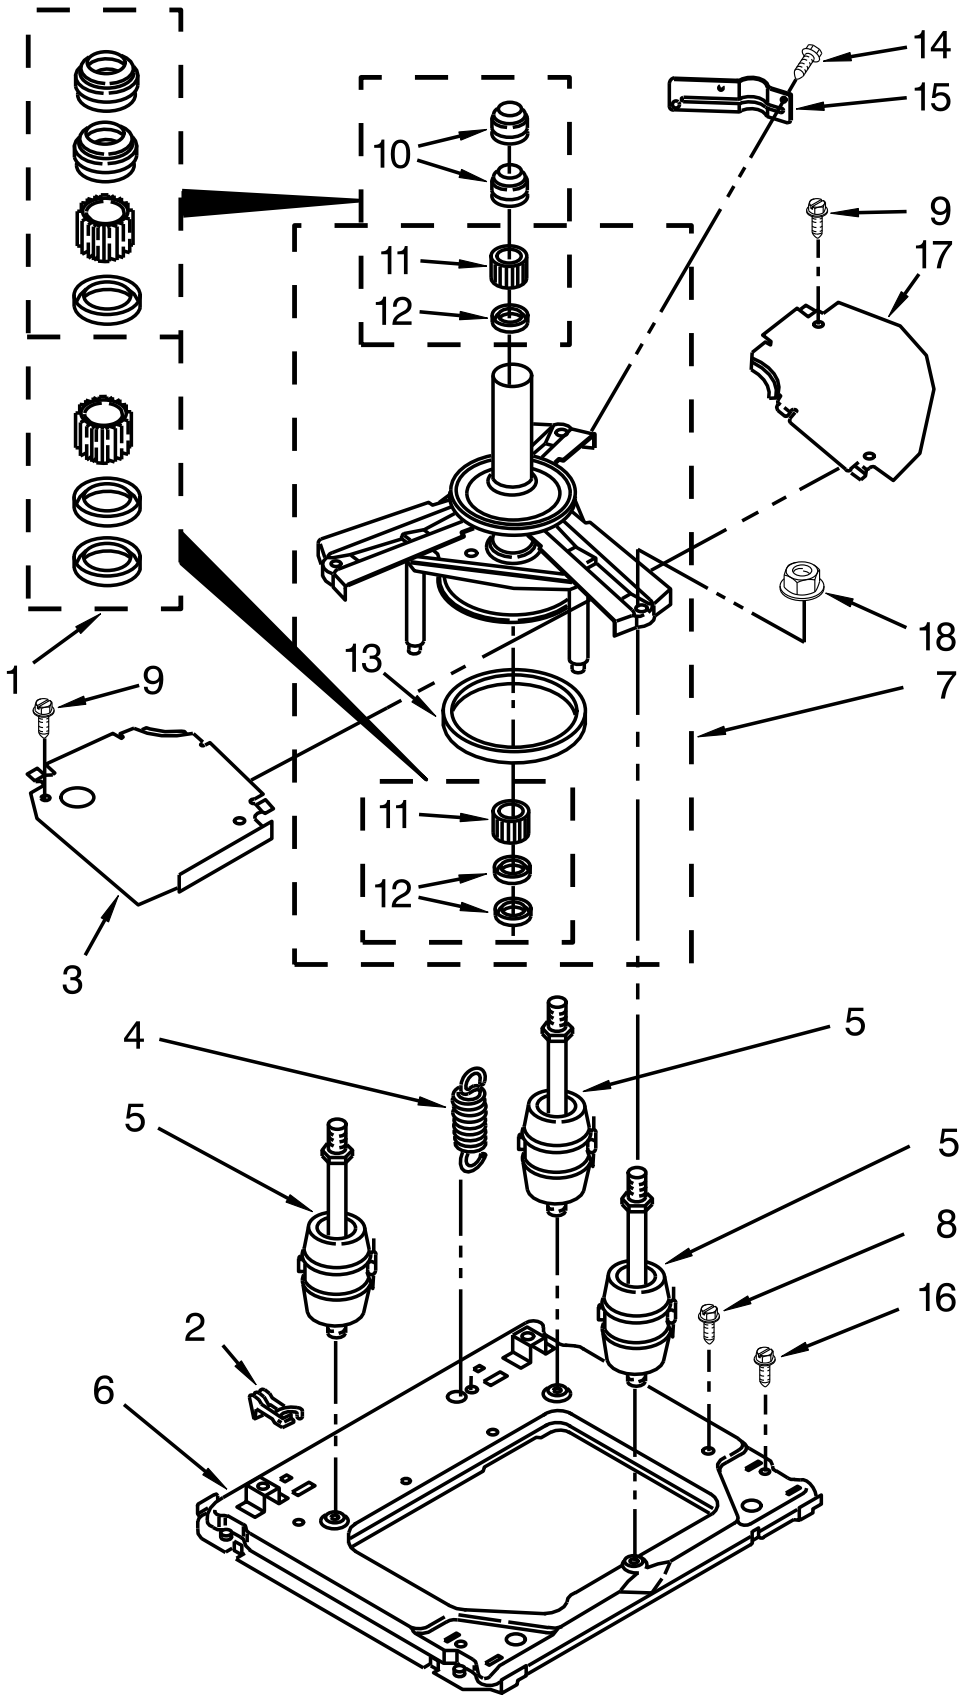

MACHINE BASE PARTS

Illus. No.	Part No.	Description
1	285203	Bearing
2	696044	Block, Restraint
3	64137	Shield, Tub
4	W10250667	Spring, Counterweight (Must be Ordered When Replacing Drive Motor)
5	3406201	Suspension Assembly
6	8577373	Base
7	63740	Tub Support and Drum
8	3351614	Screw
9	90767	Screw
10	8577376	Seal, Centerpost
11	8546455	Bearing, Centerpost
12	357409	Seal, Shaft
13	63134	Ring, Sound Deadening
14	343641	Screw
15	63636	Bracket, Counterweight Spring
16	386011	Screw & Washer (Base To Cabinet)
17	63637	Shield, Tub
18	3351021	Nut, 1/2 - 13

BRAKE,CLUTCH,GEARCASE,MOTOR,PUMP

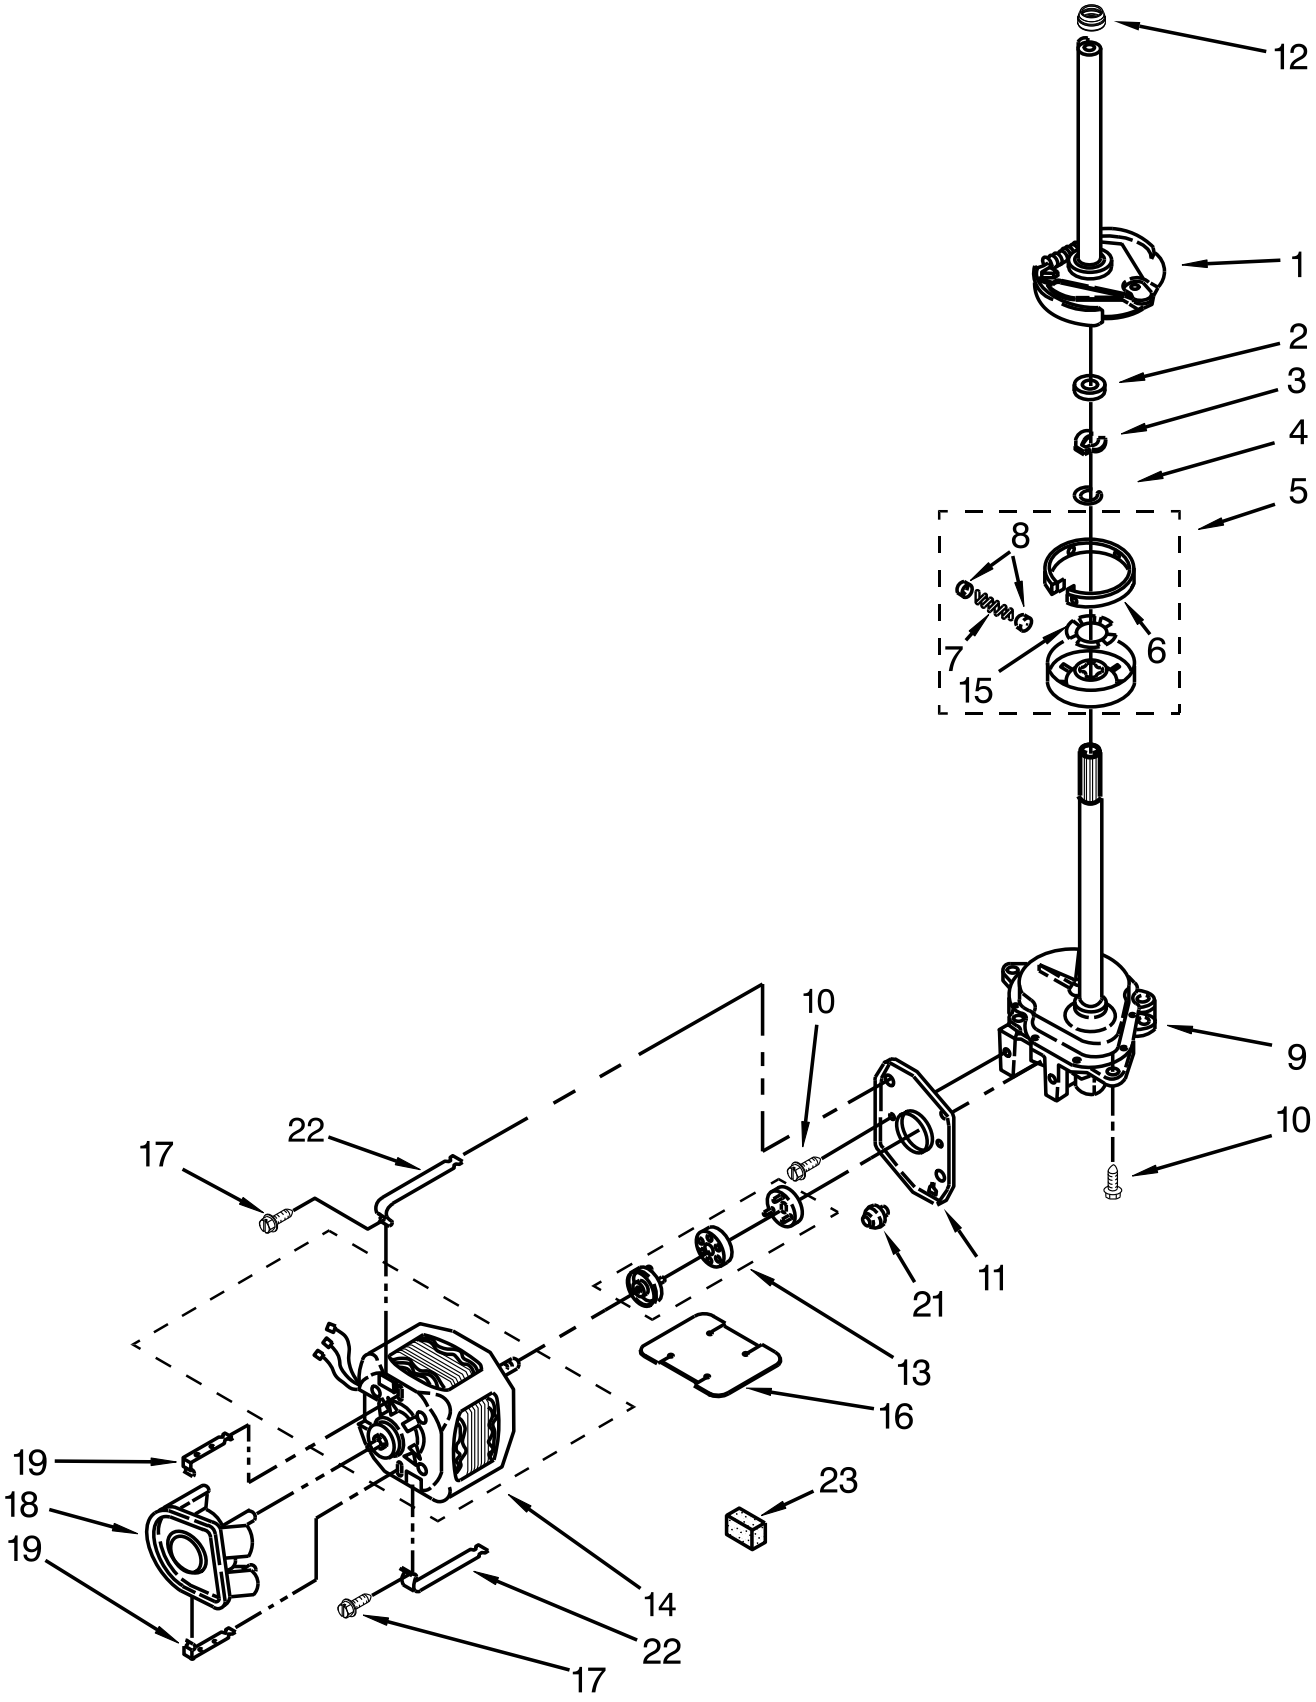

BRAKE,CLUTCH,GEARCASE,MOTOR,PUMP

Illus. No.	Part No.	Description
1	387948	Brake & Drive Tube (Complete)
2	63292	Washer, Spin Tube Thrust
3	62697	Ring, Spin Tube Support
4	63283	Ring, Retaining
5	3951312	Clutch (Complete)
6	3951308	Band & Lining Assembly
7	3946846	Spring & Damper Assembly
8	62646	Cap, Clutch Spring
9	3360630	Gearcase (Complete)
10	3357334	Screw
11	62611	Plate, Motor Mount To Gearcase
12	8577374	Seal, Centerpost
13	3364003	Coupling, Motor And Isolation
14	661600	Motor, 2-Speed
15	3355454	Clip, Anti-Rattle
16	3946532	Shield, Motor
17	3387485	Screw
18	3363394	Pump (Complete)
19	8546127	Retainer, Pump To Tub Support) Drive Motor Mount To Motor
21	62691	Grommet, Motor
22	W10086010	Retainer, Motor
23	3350013	Foam

GEARCASE PARTS

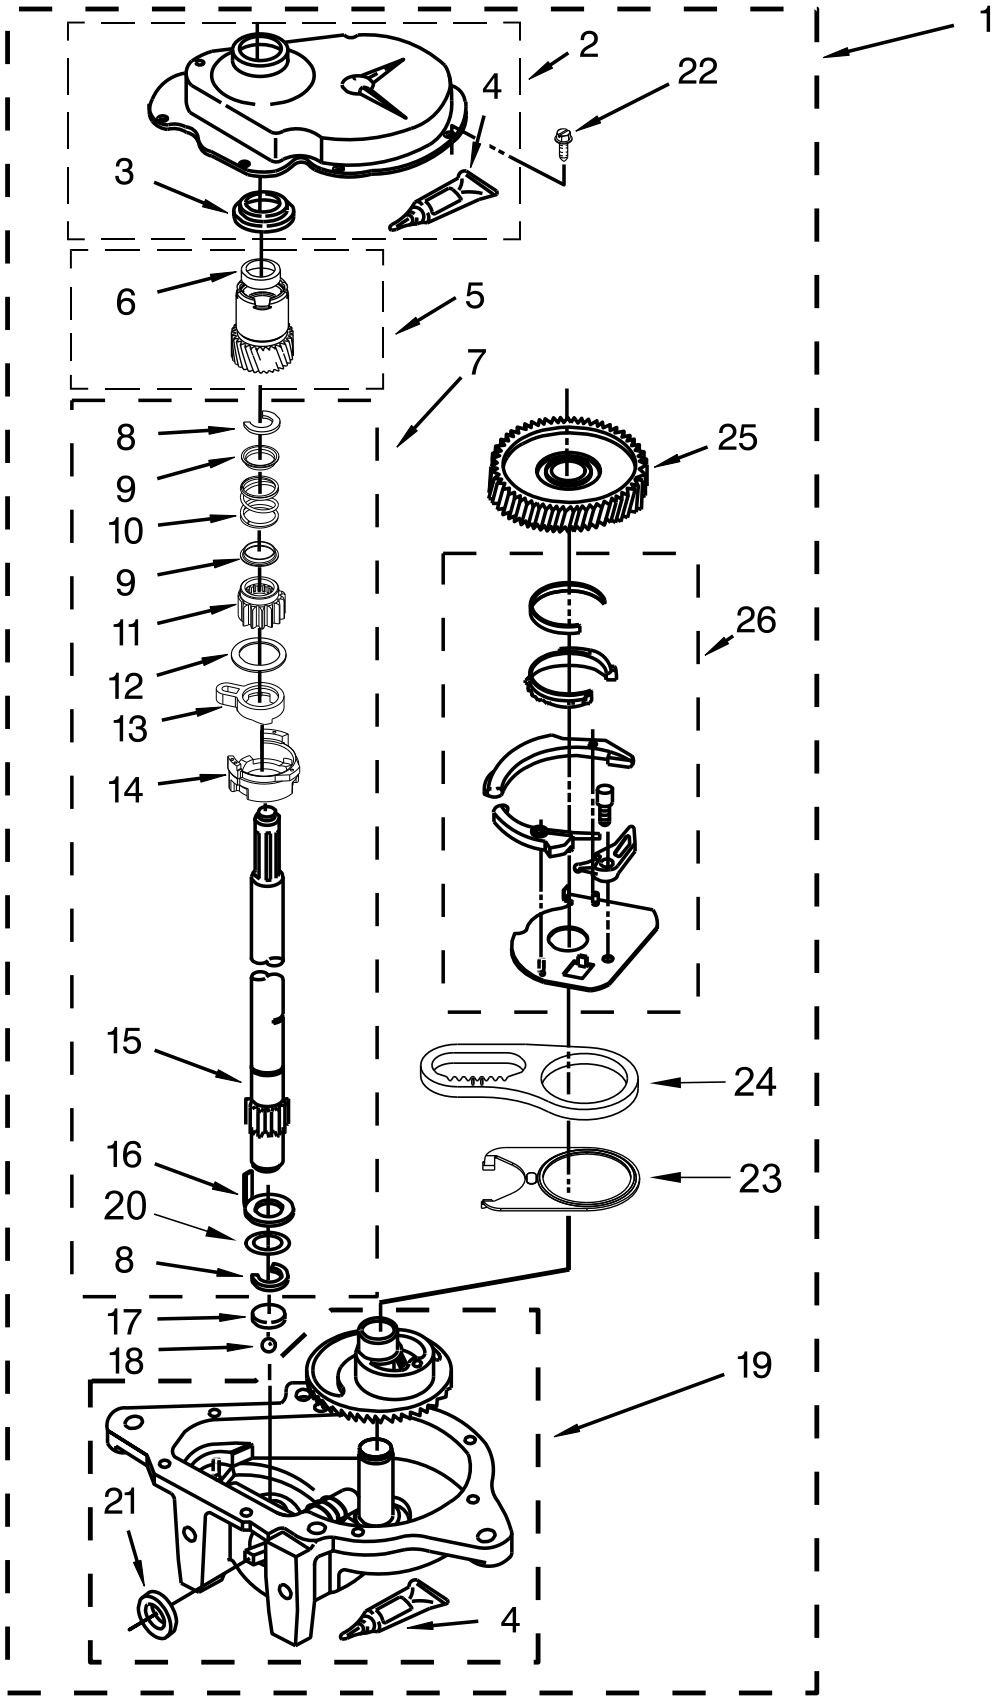

GEARCASE PARTS

Illus. No.	Part No.	Description
1	3360630	Gearcase (Complete)
2	62685	Cover, Gearcase
3	3349985	Seal, Gearcase Cover
4	285195	Sealer, Gasket (.20 Fl. Oz.) (6ml)
5	63320	Pinion, Spin
6	356427	Seal, Drive Tube
7	389387	Shaft, Agitator
8	90369	Ring, Retaining
9	62677	Retainer, Spring
10	62676	Spring, Agitator
11	W10110245	Gear, Agitate
12	62619	Washer, Agitator Gear
13	62580	Follower, Cam
14	3976349	Cam, Agitate
15	389231	Shaft, Agitator
16	62618	Washer, Cam Thrust
17	16018	Bearing, Agitator Thrust
18	85529	Ball, Bearing
19	3947635	Bottom and Pinion, Gearcase
20	388815	Washer, Intermediate
21	63324	Washer
22	3351614	Screw
23	62621	Actuator, Shift
24	8546456	Rack, Connecting
25	W10233584	Gear, Spin
26	3948433	Neutral Assembly

BRAKE AND DRIVE TUBE PARTS

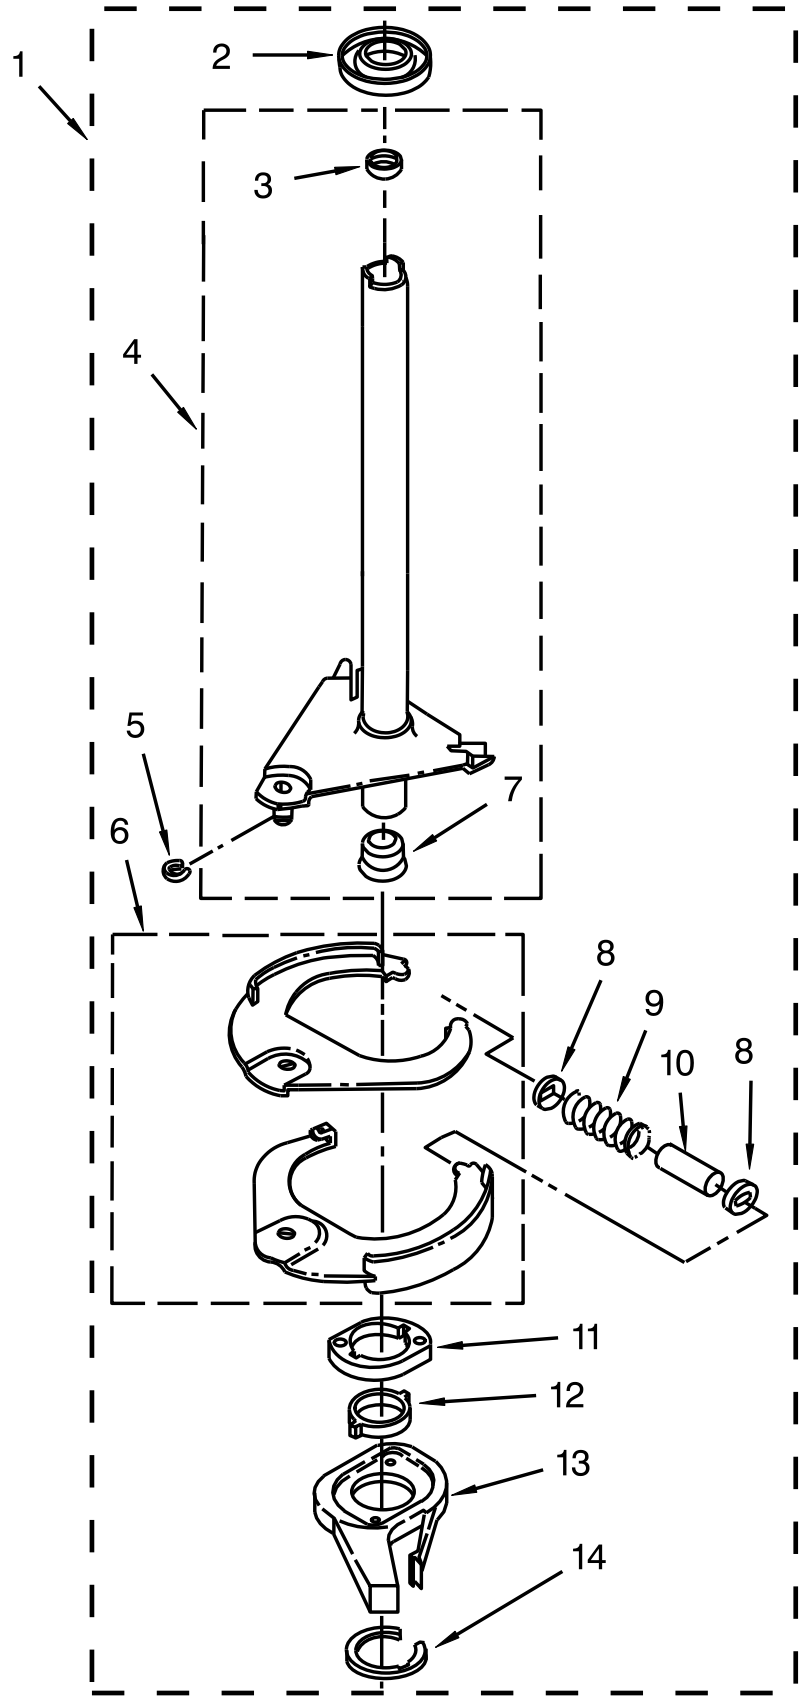

BRAKE AND DRIVE TUBE PARTS

Illus. No.	Part No.	Description
1	387948	Brake & Drive Tube (Complete)
2	62658	Ring, Thrust
3	356427	Seal, Drive Tube
4	64027	Tube, Basket Drive
5	64035	Ring, "E"
6	64232	Shoe, Brake
7	8546462	``T`` Bearing, Spin Tube
8	3353956	Cap, Brake Spring
9	63748	Spring, Brake
10	3355360	Sleeve, Brake Spring
11	8546461	Cam, Brake Release
12	63022	Sleeve, Cam
13	64194	Driver, Brake Cam
14	90368	Ring, Retaining
		(Parts Not Shown)
	285208	Lubricant (Use Only in Brake Shoe Assembly On Roller and Pin)

OPTIONAL PARTS (NOT INCLUDED)

PAINT, TOUCH-UP (1/2OZ.)

Illus. No.	Part No.	Description
	72017	White

PAINT, PRESSURIZED SPRAY (12 OZ.)

Illus. No.	Part No.	Description
	350938	Gray Primer
	350930	White

PAINT, BULK (1 QT.)

Illus. No.	Part No.	Description
	799344	White

ACCESSORY PARTS

Illus. No.	Part No.	Description
	685463	Kit, Grounding Plug, Dryer Side Panel
		Plug, Multivent
	692790	White
	279823	Side Exhaust Extension Kit (Complete)
	W10112403	Miscellaneous Parts Bag

Illus. No.	Part No.	Description
	16123	Washer, Inlet Hose
	3354858	Hose, Inlet
	285320	Siphon Break Kit
	285321	Sleeve Kit, (Contains 2 Sleeves)
	661575	Drain Hose Assembly
	W10108350	Hose, Corrugated Plastic Drain
	661577	Hose, Drain
	285442	Connector Kit, Plastic Drain Hose

OIL

Illus. No.	Part No.	Description
	350572	Oil, Gearcase

LUBRICANT

Illus. No.	Part No.	Description
	285208	Lubricant (Use Only in Brake Shoe Assembly On Roller and Pin)

SEALER

Illus. No.	Part No.	Description
	285195	Sealer, Gasket (.20 Fl. Oz.) (6ml)